

Deploying Arm Rest/Rifle Butt Rest



When the Arm Rest/Rifle Stock Rest is attached to the Chair but not in use, the securing pin should be pulled to allow the pad to be placed vertical. Untighten the Rest clamp adjustment thumbscrew (green), extend the Rest until the open end of the pad bracket aligns with the narrower body of the Rifle Support Arm, then allow the Rest to return to its lowest point and retighten the clamp adjustment thumbscrew (green). This will retain the Arm/Rifle Stock Rest in an upright position, parallel to the Rifle Support Arm for ease of transportation.



IMPORTANT: **first** attain the most comfortable and secure shooting position for you and your rifle, in relation to the front rifle support arm! Trying to set both rifle rest and arms rest at the same time may prove a little difficult.

Deploying the Arm/Rifle Stock Rest:

Untighten the Rest clamp adjustment thumbscrew (green), extend the rest until the open end of the pad bracket aligns with the narrower body of the Rifle Support Arm.



Pivot the rest towards you.



Position the Pad horizontal until the bottom hole in the Pad bracket aligns with the hole in the Arm/Rifle Stock Rest extension piece. Insert the detent pin to secure this position.

The Arm/Rifle Stock Rest is now ready to use.



FRONT RIFLE SUPPORT ARM
ARM REST/RIFLE BUTT REST
RIGHT SHOULDER/RIGHT HAND SHOOTING

View from the front!

Clamp adjustment thumbscrew (green)



FRONT RIFLE SUPPORT ARM
ARM REST/RIFLE BUTT REST
LEFT SHOULDER/LEFT HAND SHOOTING

View from the front!

Clamp adjustment thumbscrew (green)

IMPORTANT: **first** attain the most comfortable and secure shooting position for you and your rifle, in relation to the front rifle support arm!

Trying to set both rifle rest and arms rest at the same time may prove a little difficult.

Arm/Rifle Stock Rest – Used as Arm Rest



NOTE:

Arm Rest Pad is pivoted off centre –

This means the bias of the pad can point backward when deployed as an Arm Rest and is usually at its best in its lowest position and should be resting against your body.

This can be a great advantage should you need to adjust posture slightly when aligning for a shot.

VERY SOLID!

Arm/Rifle Stock Rest – Used as Rifle Butt Rest



NOTE:

Arm Rest Pad is pivoted off centre –

This means the bias of the pad can point forward with the arm extended up to the underside of the Rifle Stock when deployed. The Pad should be resting against your body.

This can be a great advantage should you need to adjust posture slightly when aligning for a shot.

VERY, VERY SOLID!